KitchenAid®

OVEN PARTS

For Models:KEMS378SSS03

(Stainless)

27" BUILT−IN ELECTRIC
COMBO OVEN
THERMAL CONVECTION

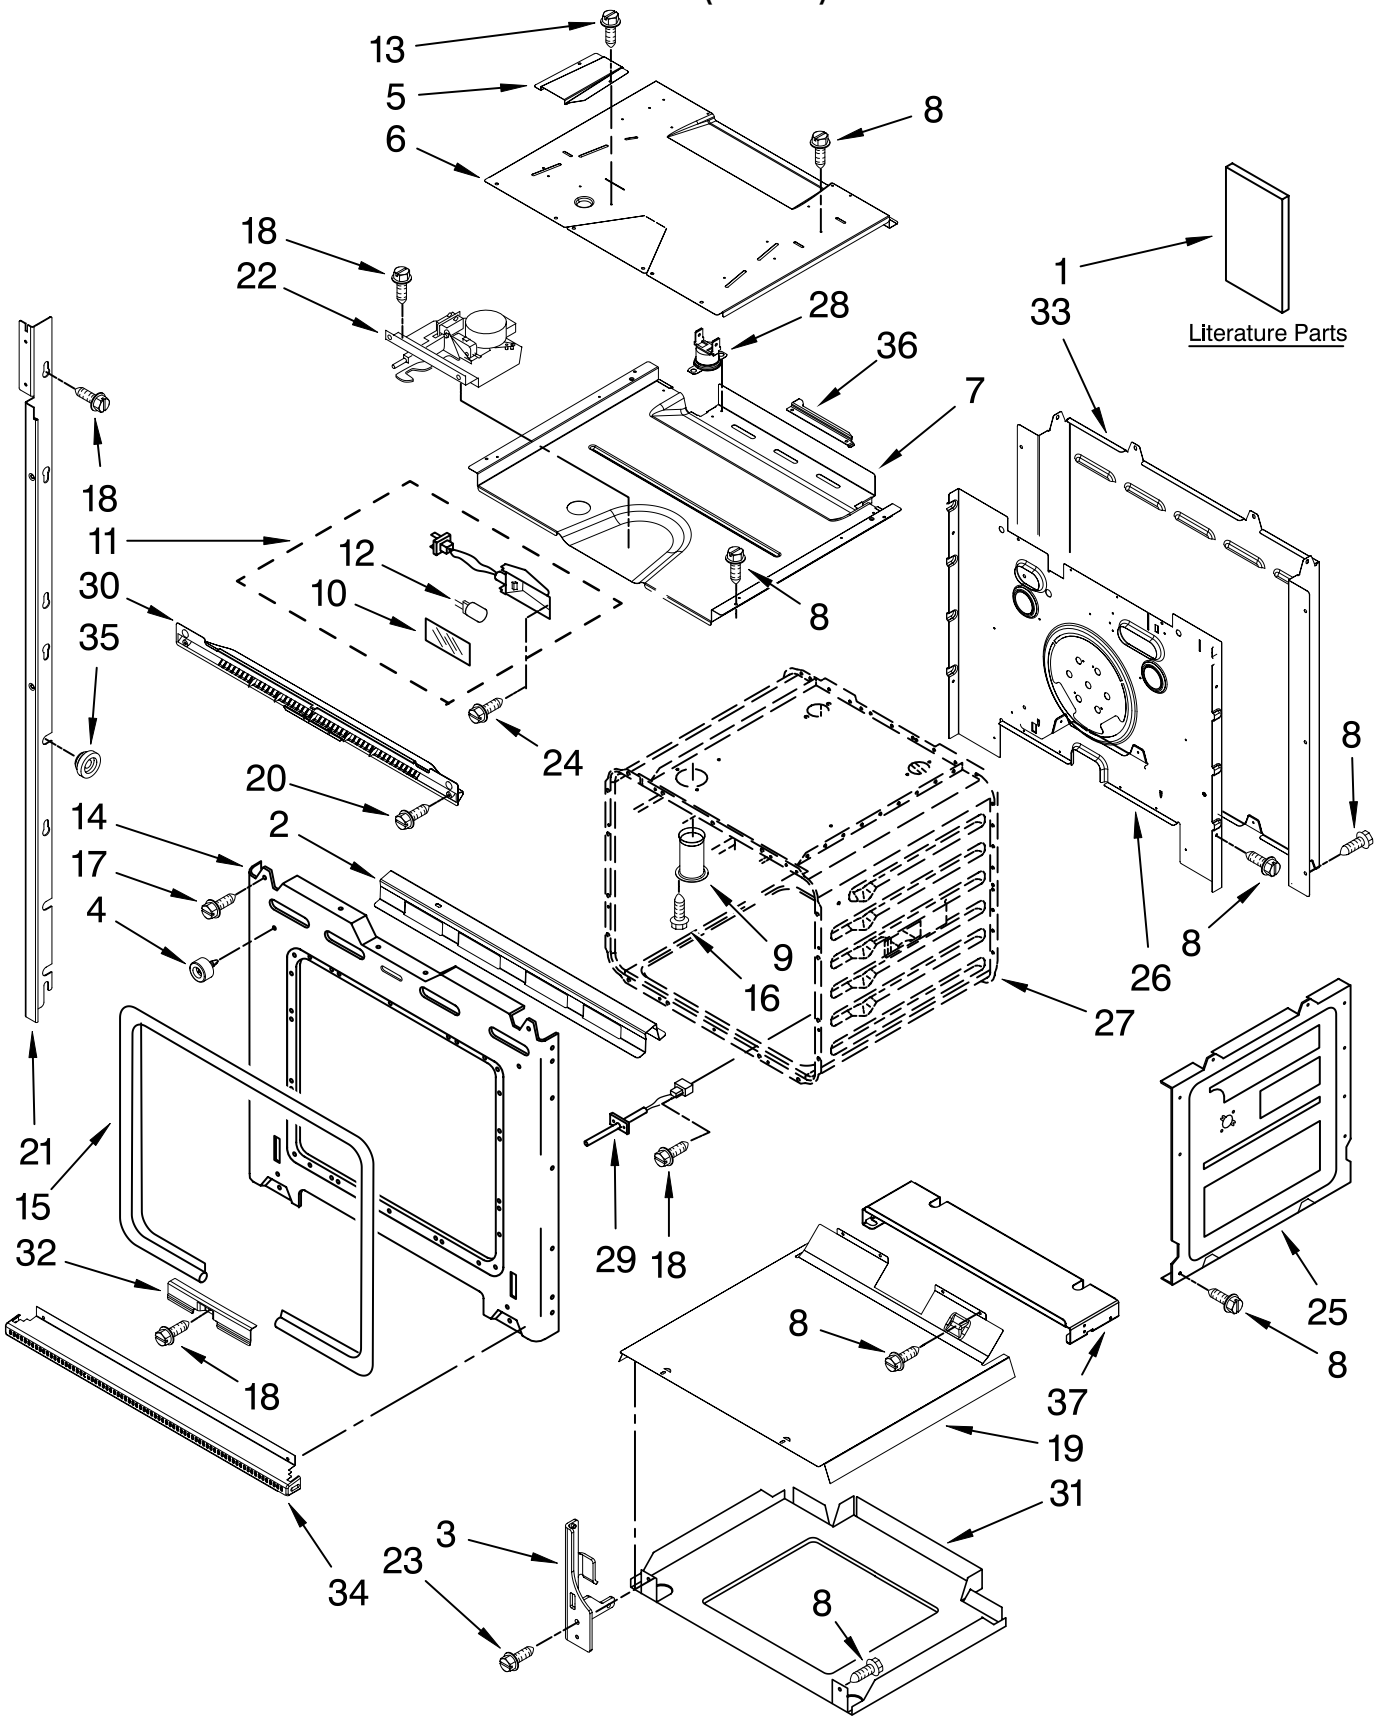

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:KEMS378SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8304337	Installation Instructions
		Use & Care Guide
	W10162223	Combo
	W10162181	Microwave Tech Sheet
	W10220956	English
	W10185206	French
		Easy Set Guide
	8304338	Oven
	8304375	Microwave Safer Cooking Tips
	9762761	English
	W10065852	French
2	W10153090	Bracket, Base
3		Hinge Receiver
	4455606	Right
	4455605	Left
4	W10105790	Bumper, Door (2)
5	8303829	Exhaust,Vent Slope
6	W10181198	Divider, Center Vent
7	W10204469	Top Chassis
8	4449809	Screw
9	4452158	Tube, Vent
10	W10169756	Lens, Light
11	W10009940	Assembly, Oven Light
12	W10169757	Bulb, Light
13	3400832	Screw (2)
14	8304629	Frame, Front
15	8304494	Gasket, Door
16	3196176	Screw
17	4449040	Screw
18	3400893	Screw
19	4451477	Support, Insulation
20	4450038	Screw (2)
21		Mounting Rail,Side
	8303679BL	Right
	8303680BL	Left
22	8303692	Latch, Motorized
23	4449743	Screw
24	4449748	Screw
25	4455641	Side, Chassis
26	8304304	Back, Chassis
27		Liner, Oven (Not serviceable)
28	8304452	Thermal Fuse
29	W10131825	Sensor
30	8303724	Vent, Center
31	8303772	Base, Chassis
32	8304478	Retainer, Gasket
33	8303517	Cover, Back
34	W10216231	Trim, Bottom
35	4448444	Grommet, Mounting Rail
36	W10169348	Bracket, Thermostat
37	8304570	Support, Microwave Module

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

8303966	Insulation, Wrap
8303968	Insulation, Back

CONTROL PANEL PARTS

For Models:KEMS378SSS03
(Stainless)

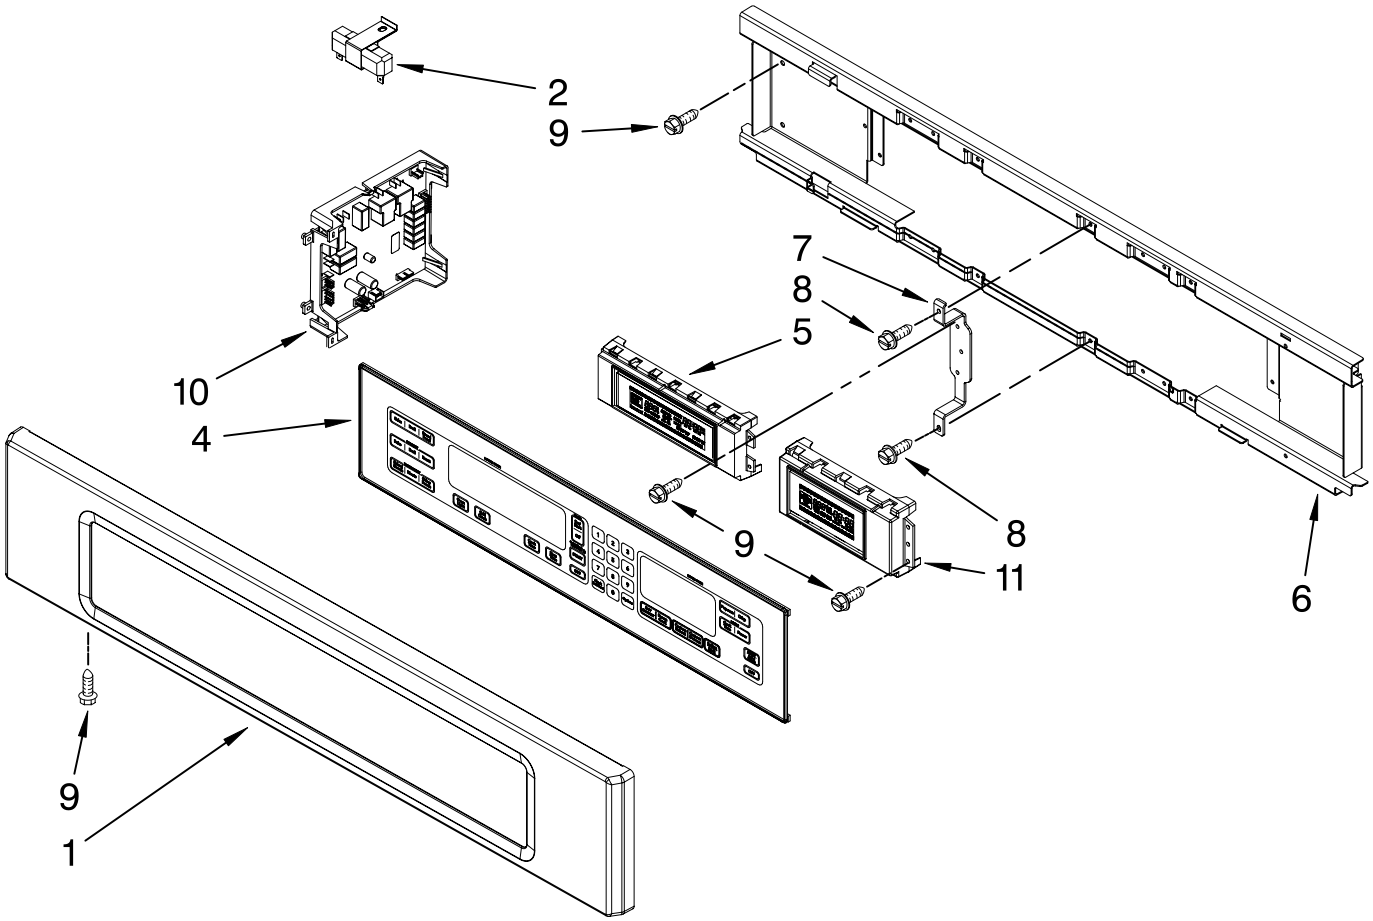

Illus. No.	Part No.	DESCRIPTION
1	W10216220	Panel, Control
2	8304441	Resistor, Drop
4	8303881	Keyboard, Glass Touch
5	W10118734	Oven, User Interface
6	8303720	Backer, Control
7	8303887	Bracket,Enclosure
8	4449154	Screw
9	3400832	Screw
10	W10119143	Appliance Manager
11	W10118735	Microwave, User Interface

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN DOOR PARTS

For Models:KEMS378SSS03
(Stainless)

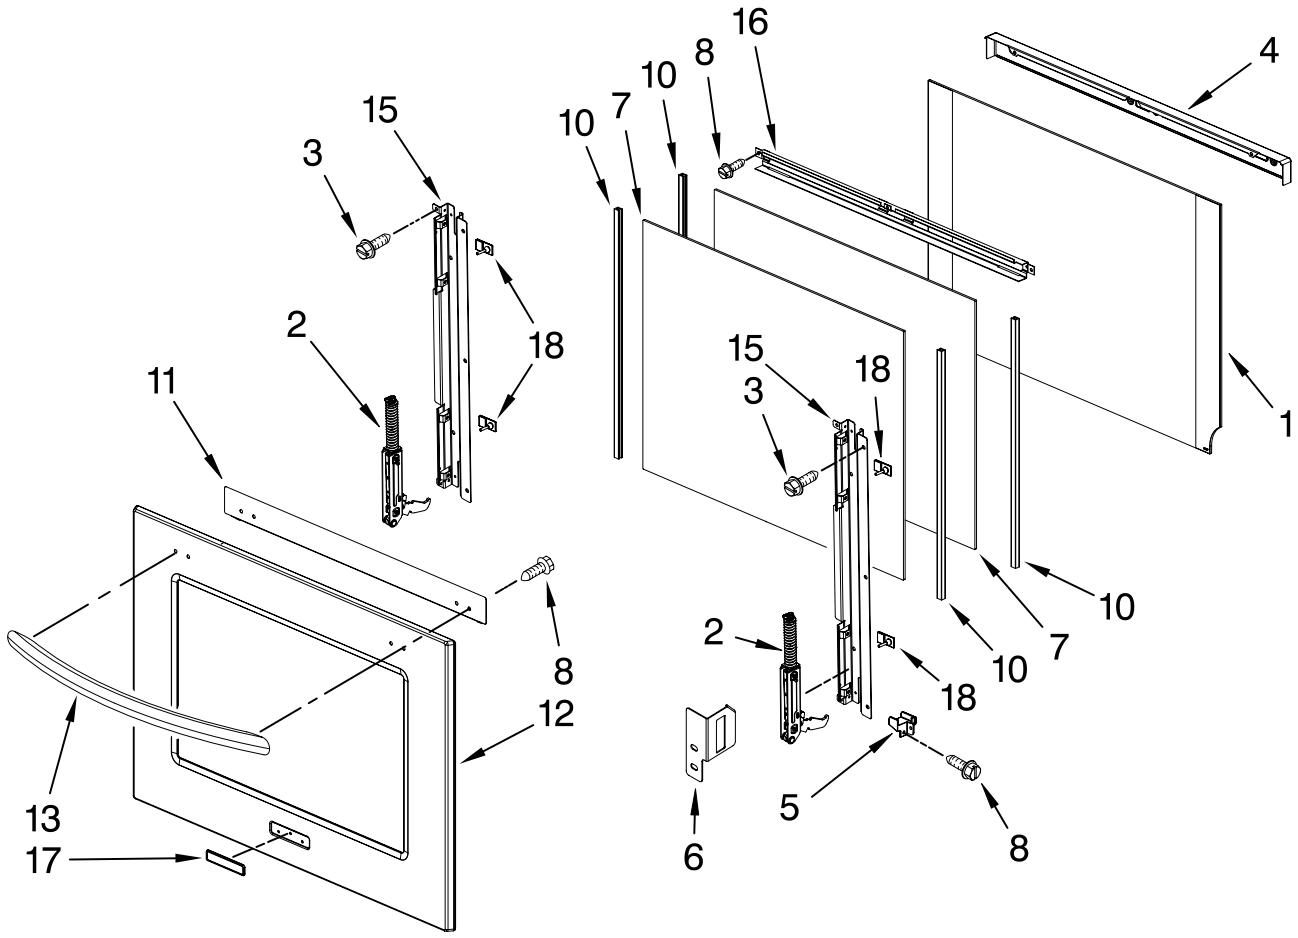

Illus. No.	Part No.	DESCRIPTION
1	8303738BL	Door Liner
2	W10174288	Hinge, Door (2)
3	3196183	Screw
4	8304580BL	Vent, Door Top
5		Bracket, Door
	8304377	Right
	8304378	Left

Illus. No.	Part No.	DESCRIPTION
6		Cover, Hinge
	W10137044	Right
	W10137043	Left
7	8303732	Glass, Inner
8	4449154	Screw
10	8304523	Seal
11	8304361BL	Bracket, Handle

Illus. No.	Part No.	DESCRIPTION
12	W10237352	Door Glass, Assembly Includes #17
13	8303775SS	Door Handle
15	8303745BL	Frame, Door Side
16	8303754	Door, Top Bracket
17	8304603SS	Badge
18	8304522	Bumper, Glass

INTERNAL OVEN PARTS

For Models:KEMS378SSS03

(Stainless)

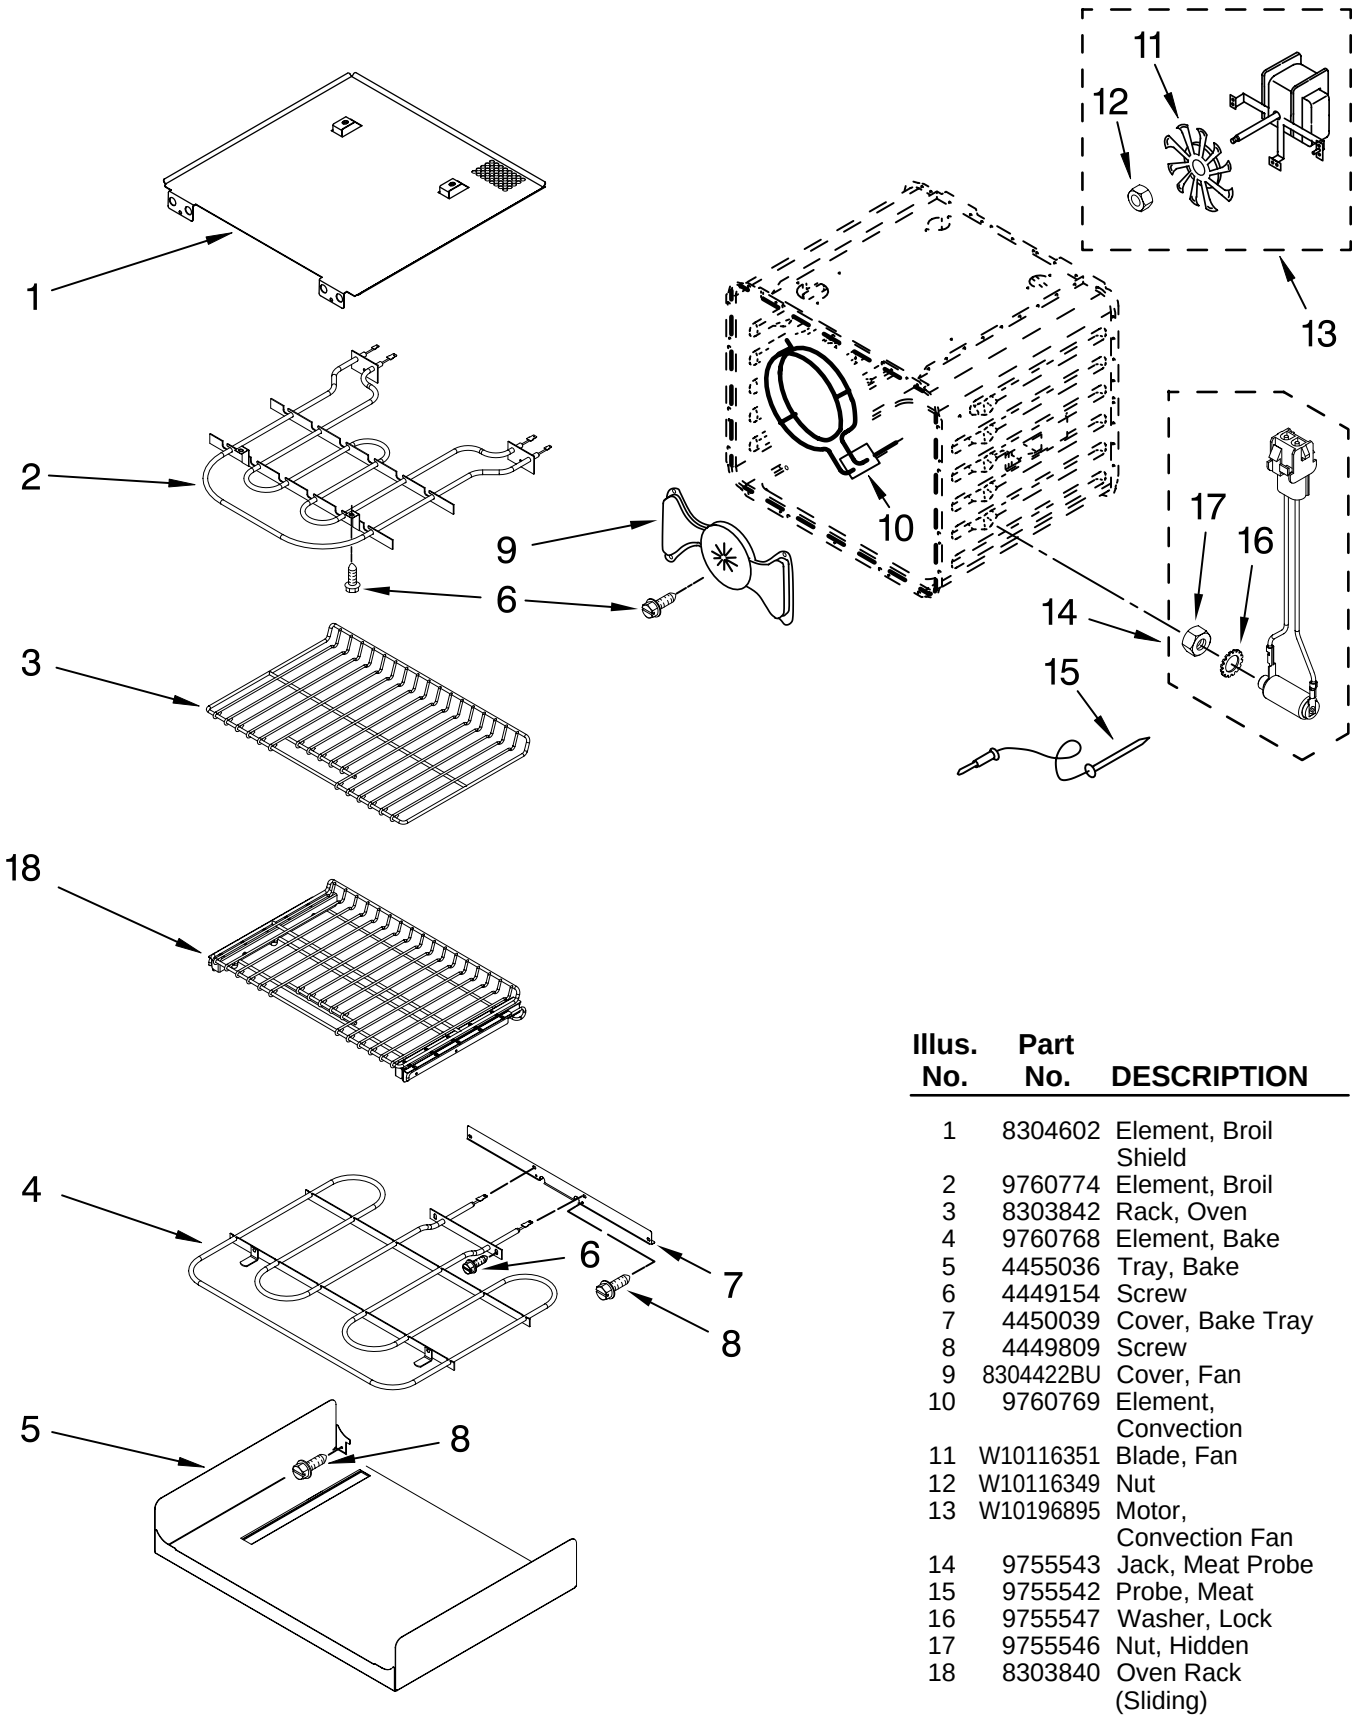

Illus. No.	Part No.	DESCRIPTION
1	8304602	Element, Broil Shield
2	9760774	Element, Broil
3	8303842	Rack, Oven
4	9760768	Element, Bake
5	4455036	Tray, Bake
6	4449154	Screw
7	4450039	Cover, Bake Tray
8	4449809	Screw
9	8304422BU	Cover, Fan
10	9760769	Element, Convection
11	W10116351	Blade, Fan
12	W10116349	Nut
13	W10196895	Motor, Convection Fan
14	9755543	Jack, Meat Probe
15	9755542	Probe, Meat
16	9755547	Washer, Lock
17	9755546	Nut, Hidden
18	8303840	Oven Rack (Sliding)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models:KEMS378SSS03
(Stainless)

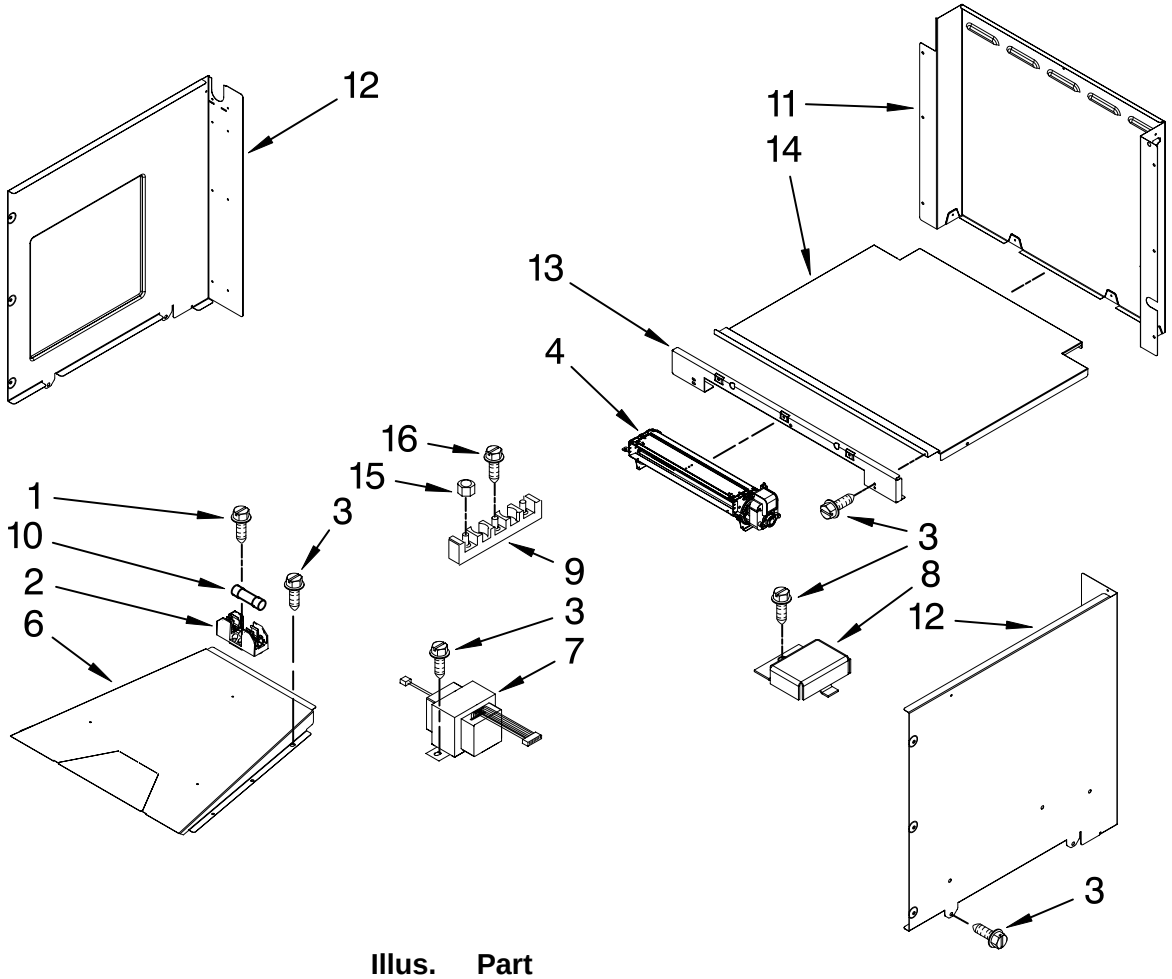

Illus. No.	Part No.	DESCRIPTION
1	4449154	Screw
2	4454949	Holder, Fuse
3	4449809	Screw
4	8303972	Blower
6	8304643	Duct, Air Outlet
7	9762053	Transformer, Control
8	8285593	Control Cover
9	4449868	Block, Terminal
10	W10017410	Fuse
11	8304509	Back Chassis Panel
12		Side, Combo
	8304546	Right
	8303539	Left
13	8303538	Channel, Rear Combo
14	8303802	Cover, Top
15	7103P027-60	Nut, Terminal Block
16	3400080	Screw

CABINET AND STIRRER PARTS

For Models:KEMS378SSS03

(Stainless)

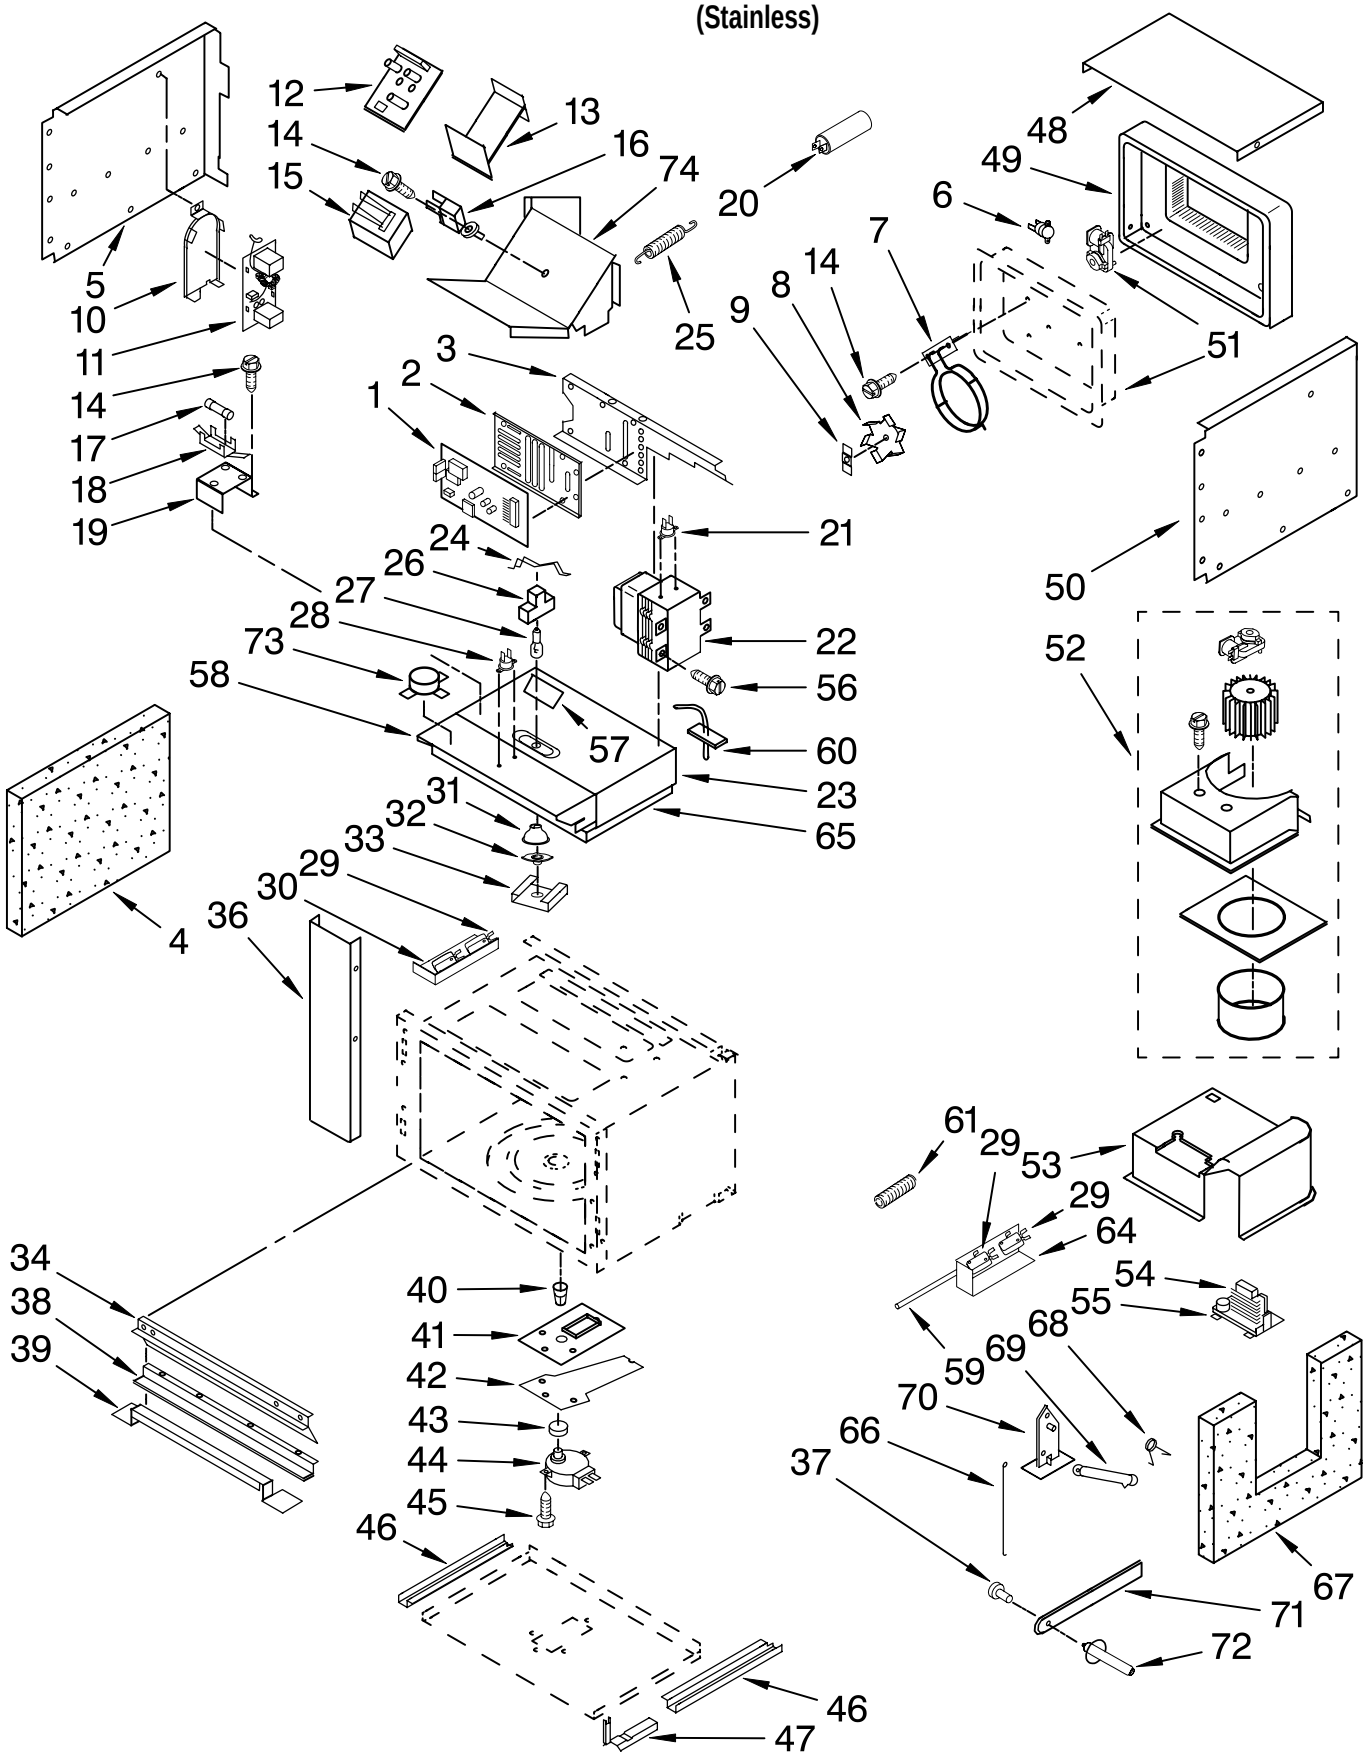

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models:KEMS378SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION
1	W10120227	Control, Electric
2	8205669	Support
3	W10130892	Plate, Air
4	W10130901	Insulation, Side Left
5	W10120471	Cover, Side Left
6	W10120223	Thermostat
7	W10120224	Element, Convection
8	4375418	Fan
9	W10120233	Nut, Speed
10	W10130891	Holder
11	W10120220	Noise Filter
12	W10120228	Control, Electric Converter
13	W10130909	Bracket, Support
14	W10131249	Screw
15	8205692	Transformer
16	4375427	Actuator
17	4375321	Fuse
18	4375231	Block, Fuse
19	W10130897	Bracket, Support
20	8205653	Filter, Noise
21	8205654	Thermostat
22	W10120113	Magnetron
23	W10130895	Plate, Air
24	4375319	Spring, Lamp
25	8205685	Spring
26	8205658	Housing, Lamp
27	4375348	Lamp
28	W10120222	Thermostat
29	W10131248	Switch
30	8205683	Holder, Switch
31	4375320	Reflector
32	4375318	Lens, Lamp
33	W10120231	Clip, Spring
34	W10120476	Top Vent
36		Trim, Side
	W10120472	Right
	W10120474	Left
37	W10120469	Bushing
38	W10130905	Bracket, Support
39	8205708	Bracket, Support
40	8205682	Shaft, Turntable Turntable
41	8205681	Cover, Motor Turntable
42	W10120234	Cover
43	4375252	Gasket, Shaft
44	8205655	Motor, Turntable
45	4375202	Screw
46	8205707	Support
47	W10120478	Hinge, Door
48	W10130903	Cover, Plate
49	W10130904	Cover, Rear
50	8205680	Cover, Side Right
51	W10120221	Convection, Motor Assmebly
52	8205721	Blower Assembly
53	W10130907	Cover, Inverter
54	W10120229	Inverter
55	W10130906	Holder, Inverter
56	W10130890	Screw
57	W10130908	Baffle, Air
58	W10130899	Plate, Air
59	W10120235	Rod, Release
60	W10120225	Sensor
61	8205685	Spring
64	8205683	Interlock
65	W10130900	Insulation
66	8205704	Spring
67	W10130902	Insulation
68	8205689	Spring
69	8205688	Arm
70	8205686	Support
71	W10120236	Arm
72	W10120470	Pin, Damper
73	8205690	Sensor
74	W10130898	Duct, Magnetron

INTERNAL MICROWAVE PARTS

For Models:KEMS378SSS03

(Stainless)

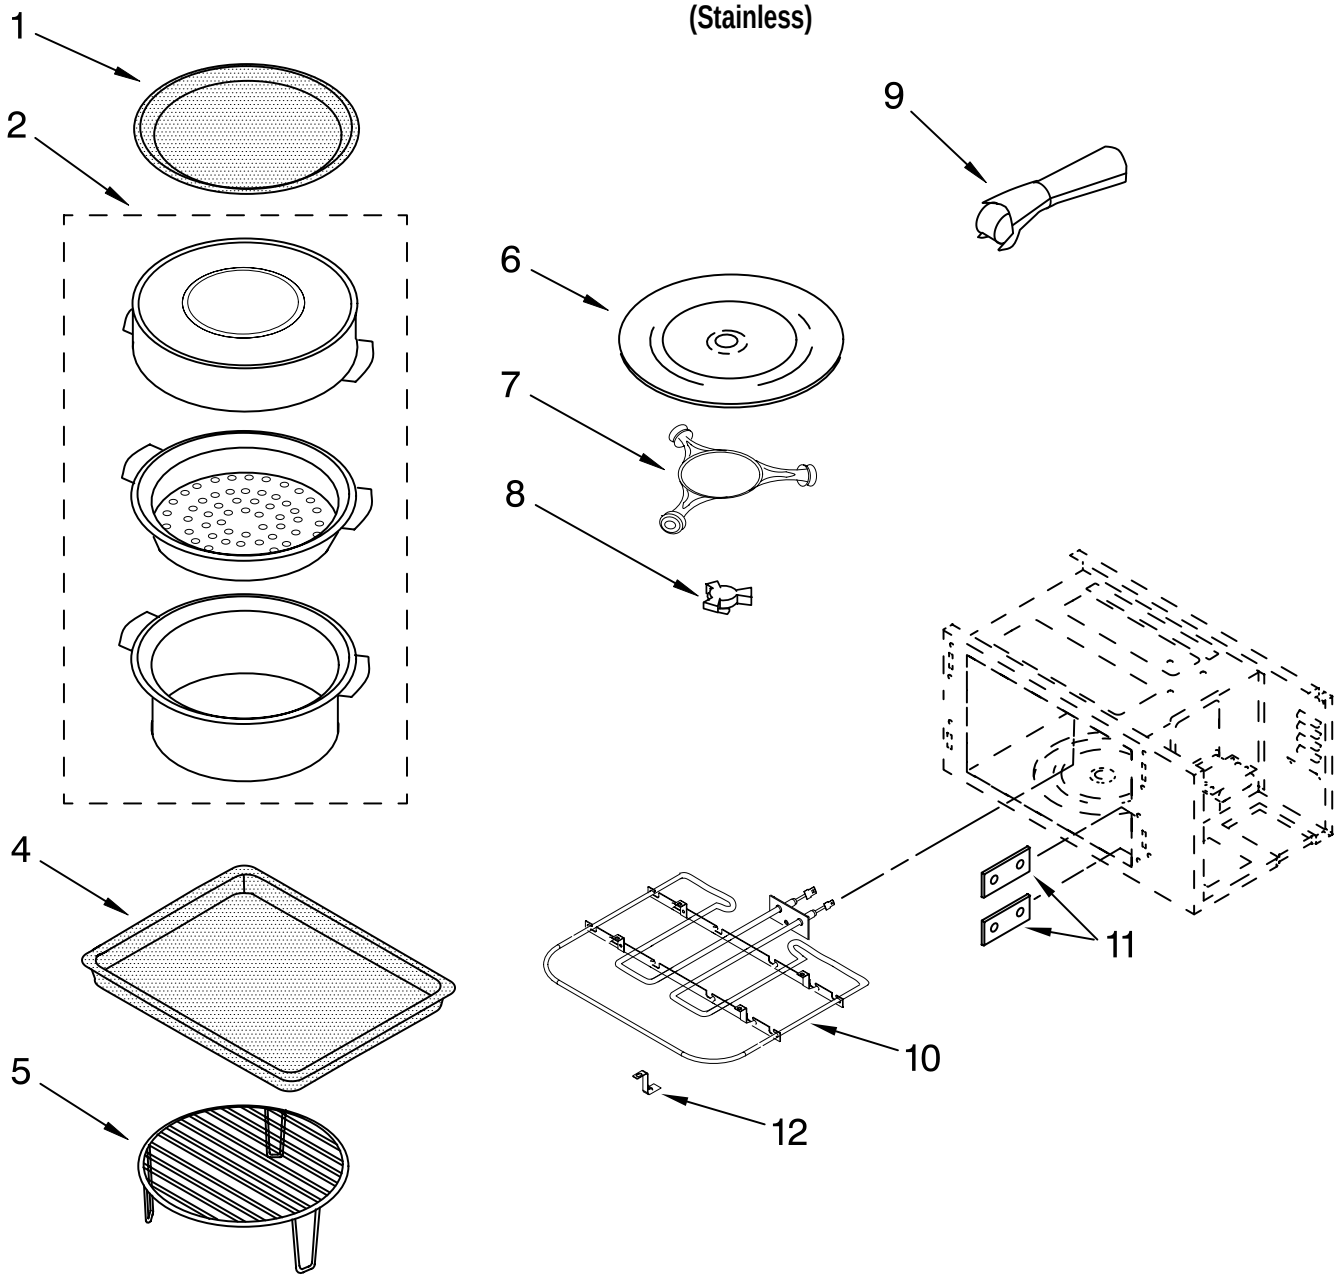

Illus. No.	Part No.	DESCRIPTION
1	W10120480	Crisp Plate
2	W10120484	Steamer
4	W10120486	Plate, Baking
5	W10120483	Rack
6	8205676	Turntable
7	8205678	Ring
8	8205677	Drive, Turn Table
9	W10120481	Handle, Pan
10	W10120226	Grill Heater
11	W10120230	Cover, Plates (2)
12	W10120232	Bracket, Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MICROWAVE DOOR PARTS

For Models:KEMS378SSS03

(Stainless)

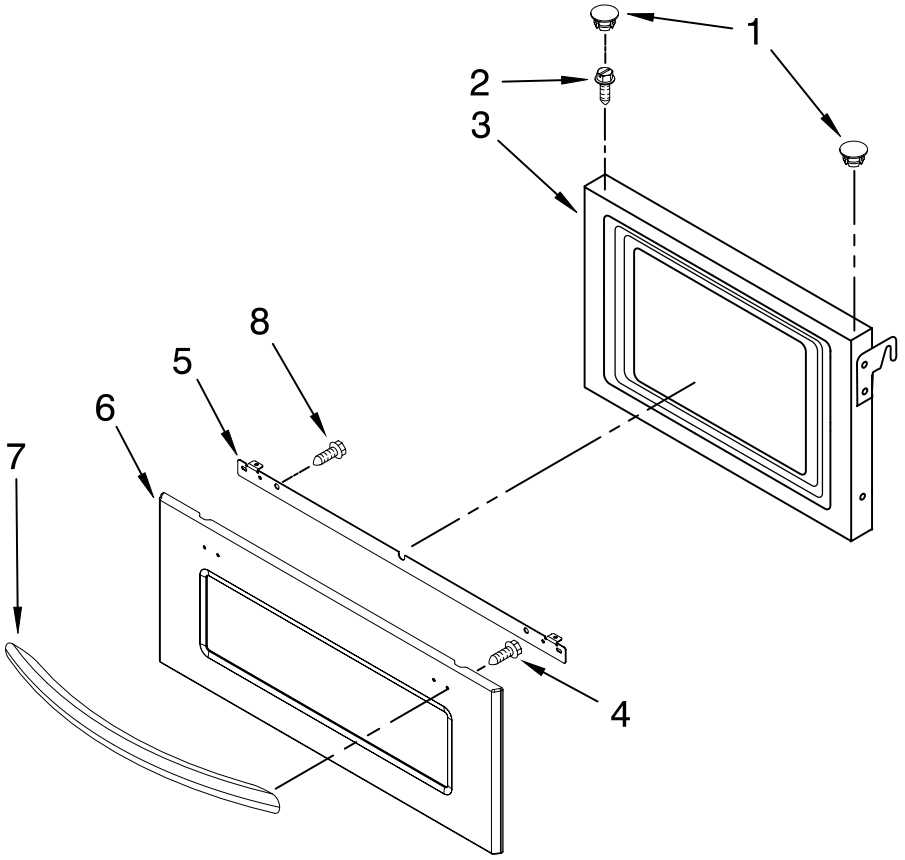

Illus. No.	Part No.	DESCRIPTION
1	8304588BL	Button, Plug (2)
2	4449809	Screw
3	W10216227	Door, Microwave
4	4449154	Screw (4)
5	8303033	Bracket, Handle
6	W10237361	Glass Assembly
7	8303775SS	Handle, Door
8	W10143304	Screw

OPTIONAL PARTS (NOT INCLUDED)

For Models:KEMS378SSS03
(Stainless)

Illus. No.	Part No.	DESCRIPTION

PAINT, TOUCH−UP (1/2oz.)

72017	White
261869	Cord Brown
72032	Black

PAINT, SPRAY

350930	White
261900	Citrine White
830864	Black

ADHESIVE

591014	Adhesive Loctite (1/3 oz.)
482338	Sealer, Silastic (3 oz.)

FOLLOWING PARTS NOT ILLUSTRATED

WIRING HARNESS PARTS

W10143473	Harness, Door Latch
8304052	Harness, User Interface
4452400	Lead, Ground
4449809	Screw
W10171567	Harness, Main
W10155291	Ground, Microwave
4450800	Screw, Ground
4449809	Screw
8304440	Conduit, Combo

Miscellaneous

4448950	Screw, Install (4)